

HONEYWELL UDC1200 MICRO-PRO Tip

1. To find out the lock out codes, hold in the Up and Setup key on power up (about 10 seconds).
2. **Cloc** will appear on the lower display and the lock value on the upper display.
3. Press the Setup key. **SLoc** will appear on the lower display and the lock value on the upper display.
4. Press the Setup key. **tLoc** will appear on the lower display and the lock value on the upper display.
5. Cycle the power to return to normal operation.