


# UDC 1000 ALARMS

**ALARM 1** - CONTACT OPEN WHEN THE PV EXCEEDS 2100 DEGREES  
(USE TERMINALS 16 & 17; N.C. POSITION)

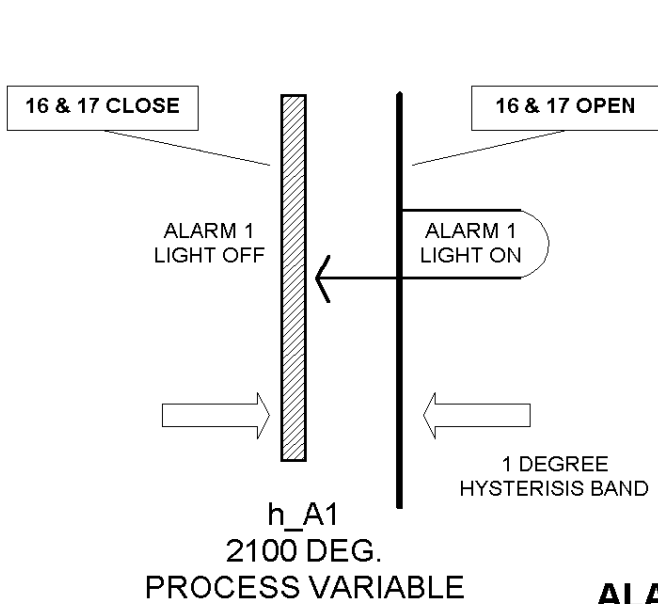


**CONFIGURATION** → P\_H1  
ALA1  
A1\_d  
USE3

ALARM 1 BECOMES  
**ENERGIZED** AND THE RELAY  
GOES TO THE **OPEN**  
**POSITION.**

## ALARM RELAY 1

**ALARM 2** - CONTACT CLOSURE WHEN THE PV GOES 10 DEGREES ABOVE OR BELOW THE  
SETPOINT. (USE TERMINALS 13 & 14, N.O. POSITION)

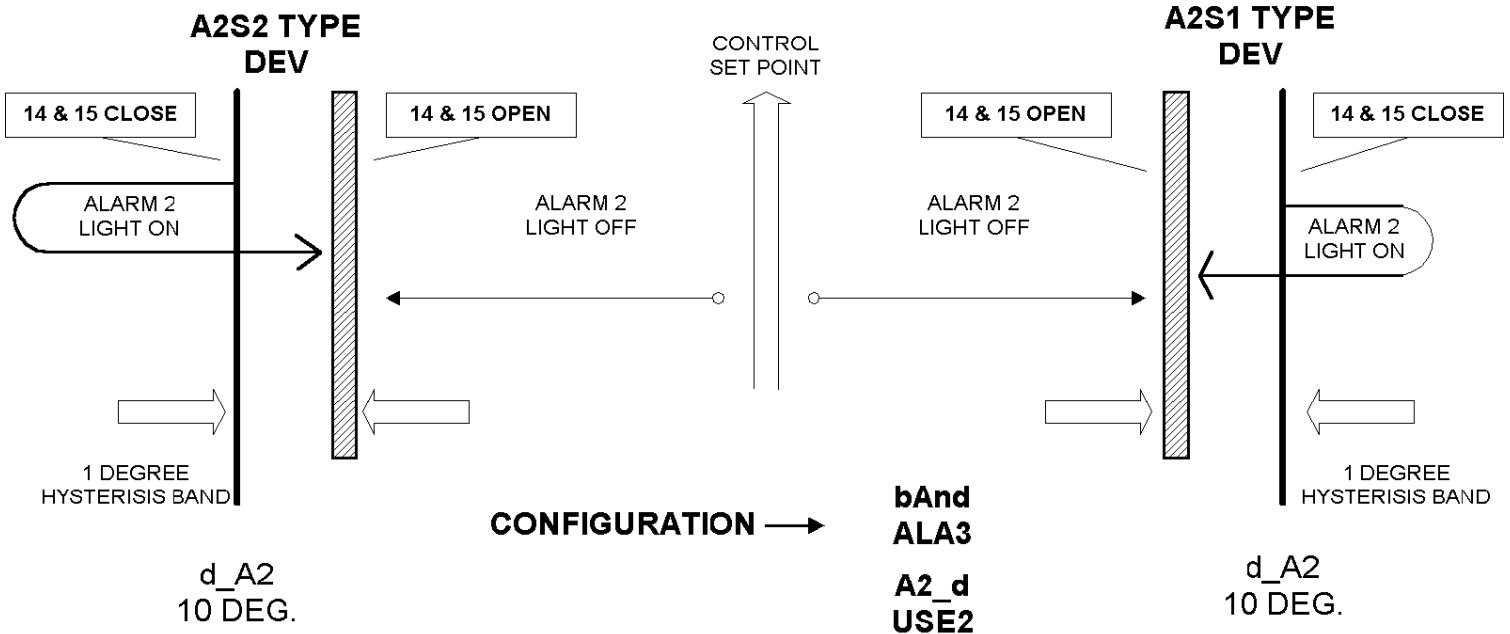

## ALARM RELAY 2