


Figure 3-3 Panel-mounting the Limit Controller

3.3 CONNECTIONS AND WIRING

The rear terminal connections are illustrated in Figure 3-4.

Output 3 is used either as an Alarm or Annunciator Output (Relay only) or Recorder Output (DC linear only).

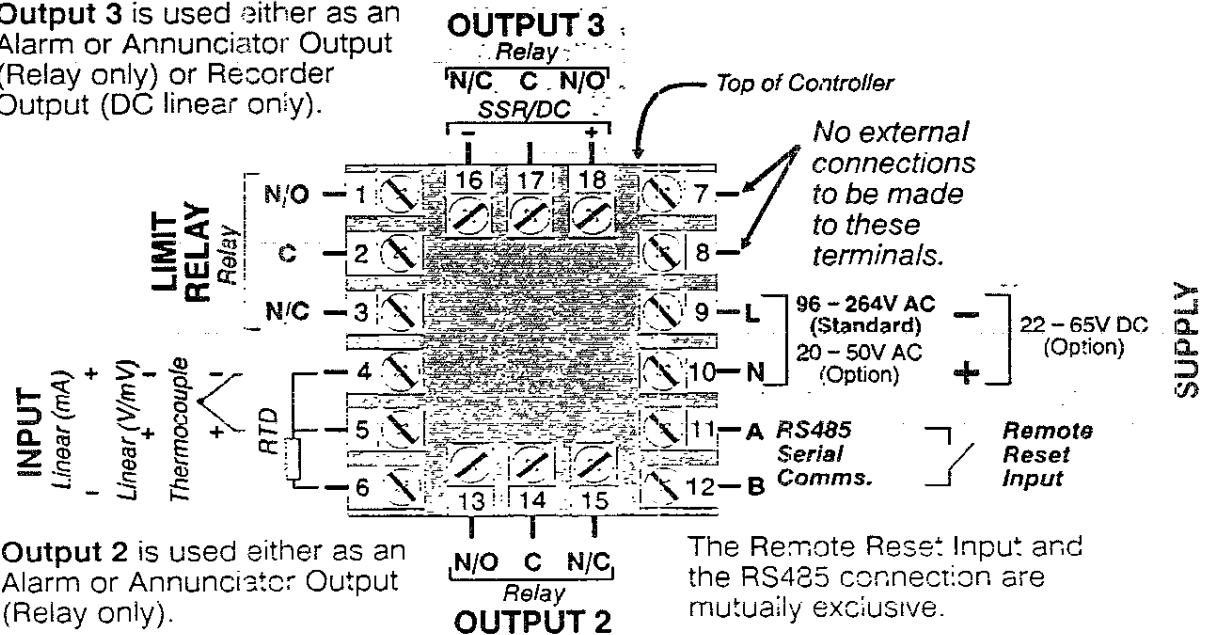

Output 2 is used either as an Alarm or Annunciator Output (Relay only).

The Remote Reset Input and the RS485 connection are mutually exclusive.

Figure 3-4 Rear Terminal Connections