

# DIALAPAK TO UDC2000 CONVERSION

DIALAPAK TERMINAL	UDC2000 TERMINAL
1	8
2	7
3	6
4	
5	SET JUMPER TO N.O. 4. SEE NOTE
6	5
7	SET JUMPER TO N.C 4. SEE NOTE
8	
9	15
10	
11	
12	16
13	
14	SET JUMPER TO N.C. 9
15	SET JUMPER TO N.O. 12
16	10 & 11
L1	L1
L2	L2
GND.	GND

**NOTE:**

When using both the normally open and normally closed contacts on the Dialapak, you must drive a external relay and use the contacts on that external relay. Set UDC relay jumper to normally open. See below.

**DC200E OR DC200H ONLY**

UDC2000

