

Running a Set Point Ramp

Step	Procedure
1.	Place the controller in the Automatic mode (i.e.) only if you have a unit with Auto/Manual option
2.	Press the Lower Display key until SP shows in the lower display. Set the Sp to the <u>desired starting Setpoint</u> of the Ramp.
3.	Start the Ramp by pressing the Run/Hold key.

Operation:

When the Run/Hold key is pressed, the Set Point ramp function starts. It ramps the Local setpoint at a calculated rate. At the **end** of the Set point ramp, it stores the **Final SP as the Local setpoint**. You now are controlling at that **Final Set point**.

If you should wish to *re-run* this program, then you must go back and do **steps 1 - 3**. Don't forget to set the Setpoint to the desired starting point of the Ramp.