

# ***UDC2000 Limit Controller***

## **Setting Trip Point To 1400F**

### **Configuration**

Press **SET UP** key until you see;

Upper Display = **SET**

Bottom Display = **LIMIT**

Press **FUNCTION** key until you see:

Bottom Display = **HI RNG**

press ▲ ▼ keys set trip point

Upper Display = **2000**

Bottom Display = **HI RNG**

Press **FUNCTION** key until you see:

Bottom Display = **LO RNG**

press ▲ ▼ keys set trip point:

Upper Display = **0**

Bottom Display = **LO RNG**

Press **FUNCTION** :

Press **DISPLAY** until SP shows in the lower display.

Press the ▲ ▼ keys until the **SP** is set at **1400**.

Press DISPLAY to store the SP value

If unit is flashing **LIMIT** press the **Reset** key to unlatch the limit relay