

UDC2000 Limit Controller

Setting Trip Point To 400F

Configuration

Press **SET UP** key until you see;

Upper Display = **SET**

Bottom Display = **LIMIT**

Press **FUNCTION** key until you see:

Bottom Display = **HI RNG**

press **▲ ▼** keys set trip point

Upper Display = **400**

Bottom Display = **HI RNG**

Press **FUNCTION** key until you see:

Bottom Display = **LO RNG**

press **▲ ▼** keys set trip point:

Upper Display = **400**

Bottom Display = **LO RNG**

Press **FUNCTION** :

Press **DISPLAY**

If the unit is flashing **LIMIT** press the **Reset** key to unlatch the relay.

Note:

This will force the trip point to be 400F. To change the trip point the procedure above must be repeated using the new trip point value.