

DIALAPAK TO UDC2300 CONVERSION

DIALAPAK TERMINAL	UDC2000 TERMINAL
1	8
2	7
3	6
4	
5	SET JUMPER TO N.O. 4. SEE NOTE
6	5
7	SET JUMPER TO N.C 4. SEE NOTE
8	
9	15
10	
11	
12	16
13	
14	SET JUMPER TO N.C. 9
15	SET JUMPER TO N.O. 12
16	10 & 11
L1	L1
L2	L2
GND.	GND

NOTE:

When using both the normally open and normally closed contacts on the Dialapak, you must drive an external relay and use the contacts on that external relay. Set UDC relay jumper to normally open. See below.

DC230B-EE OR DC200L ONLY

UDC2000

