

Setting Operating Voltage

Operating voltage selection

The controller is shipped, configured for use with 120 Volts as shown in Figure 2-2.

CAUTION OPERATING A 120 VOLT CONTROLLER AT 240 VOLTS WILL DAMAGE THE UNIT.

- Make sure that the transformer connection (J12) at the back of the controller is positioned correctly for the operating voltage (120 or 240) that will be used.
- If you want to use 240 Volts, move the connector to the position shown for 240 Volts in Figure 2-2.
- If you want to change the operating frequency from 60Hz to 50Hz, see *Section 3 - Configuration*.

Figure 2-2 Operating Voltage Selection

