

Setting Input 3 Hardware


Checking the Input 3 jumper selection

For controllers with the third input option, jumper W201/W202 is the third input selector. Refer to Figure 2-5 for jumper location and place the jumper as follows:

- No Third Input or Position Proportional Output = Jumper Position W201
- Third Input selected = Jumper Position W202

ATTENTION Third Input and Positional Proportional Output are mutually exclusive.

Figure 2-5 Input 3 Jumper Location

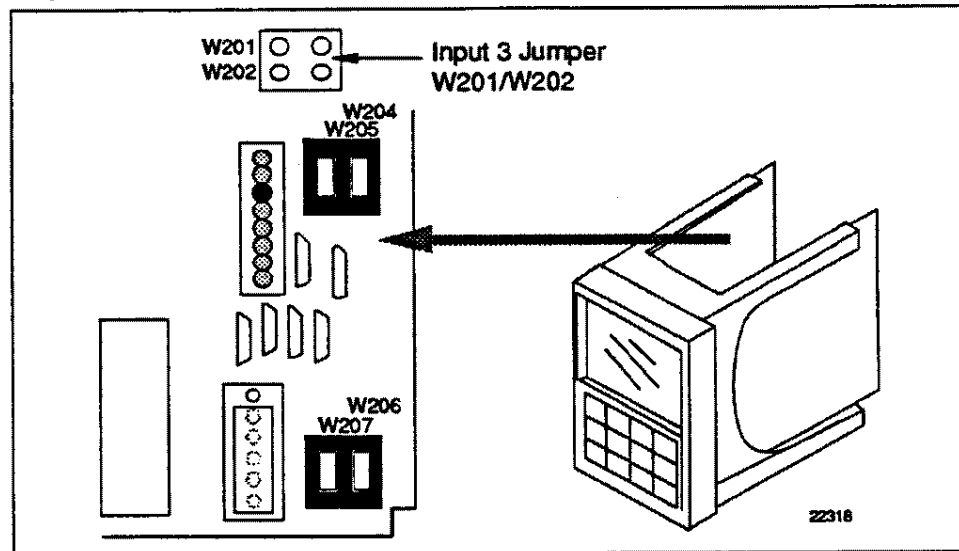

Calibrating the position proportional output

Note that the Position Proportional Output or Three Position Step Models (DC5066) must have the output calibrated per Subsection 8.3 - "Position Proportional Output Calibration" to ensure the displayed output (slidewire position) agrees with the actual final control element position.

Model DC5065, Three Position Step Models only, requires that only the motor time be entered (See subsection 8.3, **Full calibration is not required**).