

Setting Transmitter Power Selection

Checking the transmitter power selection

The transmitter power board, which is plugged into the controller board, is configured at the factory in accordance with your model number selection (None, Input 1, Input 2, input 3, or all).

If you want to change the transmitter power configuration, install the cowbell jumpers, supplied with the power board, across the appropriate pins on the power board as indicated below and shown in Figure 2-8.

TRANSMITTER POWER	JUMPER POSITIONS
Input 1 only	W3 and W4
Input 2 or Input 3	W1 and W2
Input 1, 2, or 3	W1, W2, W3, W4
Disable Inputs	Remove all jumpers

Figure 2-8 Transmitter Power Jumper Positions

