


DR4500 Enhancements (Ver 10.59) - 7/99 Internal Cascade


DR45AT-1100-40-000-0000000-0

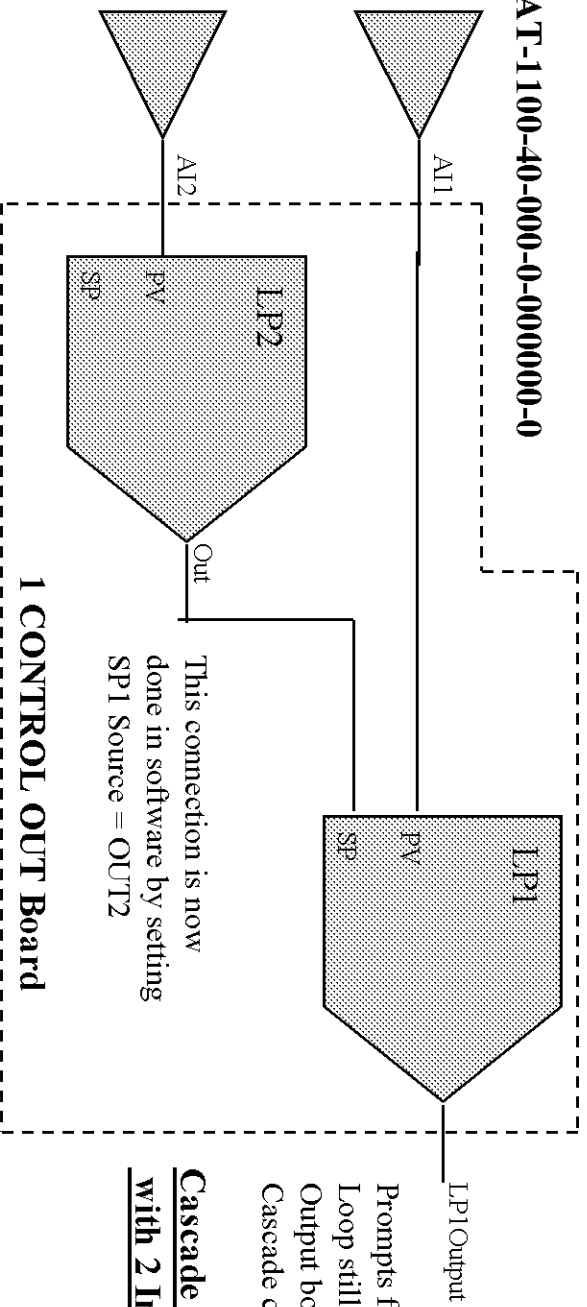

Prompts for each Control Loop still show up but only 1 Output board is require for the Cascade control

Cascade Control done directly with 2 Inputs/1 Output

DR4500 Before Enhancements - 7/99

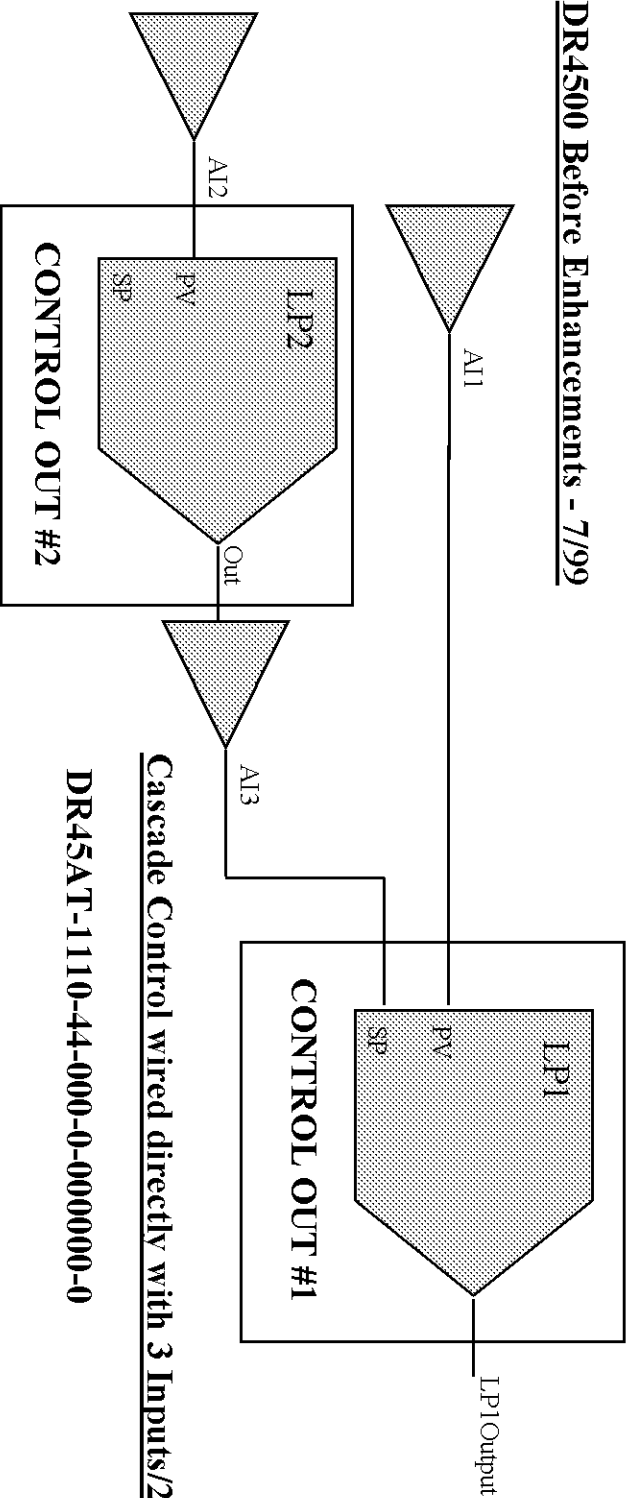

Cascade Control wired directly with 3 Inputs/2 Outputs

DR45AT-1110-44-000-0000000-0