

VRX180 TAC TIP

Restoring Program mode -Main Menu after a Configuration Load

A situation can occur in the VRX180 when loading new configurations into the video recorder. If the configuration is so large that its loading time exceeds the HMI/CPU card, inter-communication timeout, the Program Main Menu display may not show the full list of items on the menu. This will require the user to RESET the recorder from the Maintenance Menu or by pressing the Menu and Enter keys simultaneously.

Additionally, if the user attempts to load a configuration when only a partial Program Mode-Main Menu is displayed, the user's configuration will NOT load properly and error messages will be reported at the completion of the load. The user will need to clear memory and reload his configuration to correct this situation.

Please follow the simple procedure below to assure proper operation of the VRX180, Video Recorder.

Prior to loading a configuration from a floppy disk or downloading from SCF:

- 1) Clear Memory from the Maintenance Menu
- 2) Reset the recorder from the Maintenance menu (only if partial Program Mode- Main Menu is displayed).
- 3) Load the user configuration