

DCP 216 General Reset

The general reset is a function to make the data which user can set be of same setting as that at shipping from the factory. The setting at shipping from the factory is described as initial value in the table of each data. The program is all erased, however the sensor number setting and °C/°F setting do not change by the general reset. The operating status of the instrument becomes READY, AUTO.

Operation Means:

- (1) Draw out the main unit of instrument from the case after turning the power supply off.
- (2) Short-circuit between the pin 2 and 3 of Connector P7 of CPU board (third board from the top) with a jumper plug.
- (3) Put the main unit into the instrument and make the power supply on. The upper display indicates "GrES".
- (4) Turn the power supply off and draw out the main unit.
- (5) Remove the jumper plug from Connection P7. Connect the removed jumper plug to the pin 1 or 4 of P7. However, do not short-circuit.
- (6) Put the main unit into the case.

Connector P7

