


DCP 50 Alarms

ALARM 1 - CONTACT OPEN WHEN THE PV EXCEEDS 2100 DEGREES
(USE TERMINALS 16 & 17; N.C. POSITION)

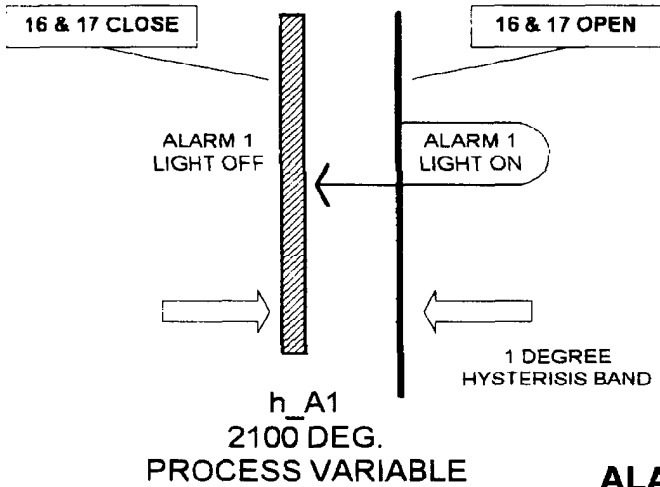


CONFIGURATION → P_H1
ALA1
A1_d
USE3

ALARM 1 BECOMES **ENERGIZED** AND THE RELAY GOES TO THE **OPEN POSITION**.

ALARM RELAY 1

ALARM 2 - CONTACT CLOSURE WHEN THE PV GOES 10 DEGREES ABOVE OR BELOW THE SETPOINT. (USE TERMINALS 13 & 14, N.O. POSITION)

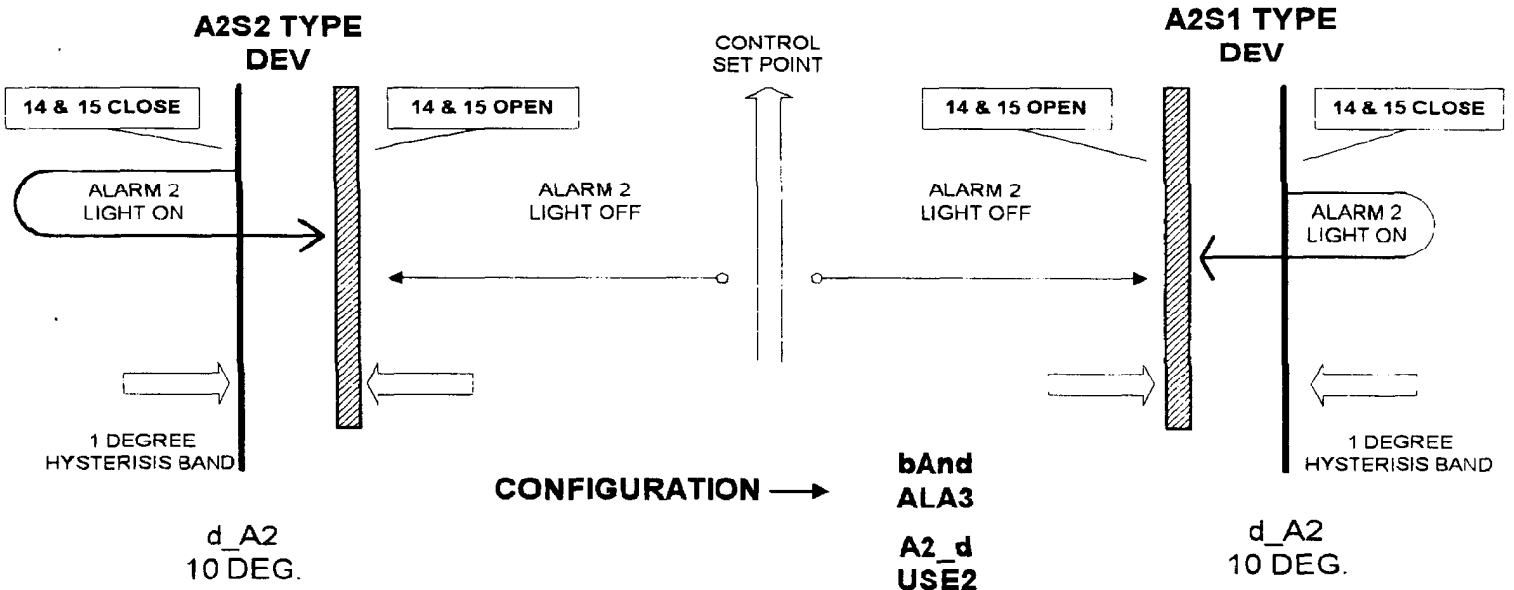

ALARM RELAY 2