



# NORMAL OPERATION (Yellow LED OFF)

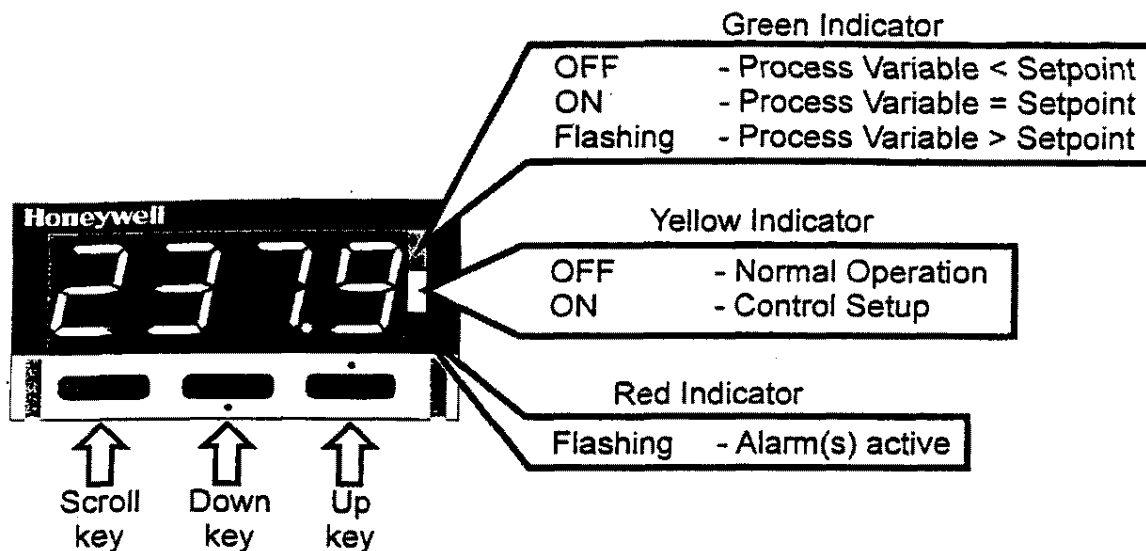

In this mode, the display normally shows the process variable value. Use the Scroll key to step through a sequence of parameters as follows:

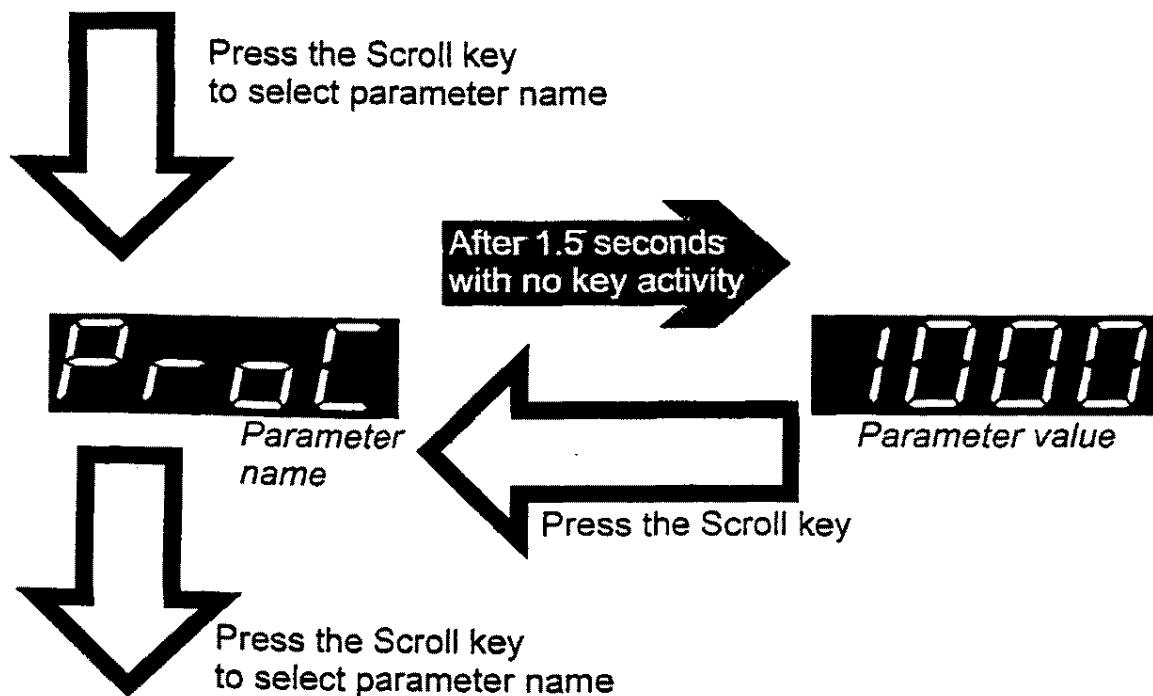

The following parameters are available in Normal Operation:

