

DCP552 TECHNICAL TIP

RUN DIGITAL INPUT DOESN'T OPERATE

- **DUAL CHANNEL DCP552 RUN DIGITAL INPUT OPERATION**
 - Synchronous and non synchronous operation (P04 = 0 or 1)
 - Note 1: In order to run a program, **both** Channel 1 and Channel 2 **must have that program number configured**.

Example: If trying to run Channel 1 program 1, Channel 2 program 1 must also have a program configured. ***If not, then the RUN light will not light and the program cannot be placed into the RUN mode using the digital input.***

- Note 2: If Channel 1 or Channel 2 **does not** have a program configured, then the ***RUN light will not light and the program cannot be placed into the RUN mode if sw15 and sw16 are open.***

Example: Trying to run Channel 1 program 1 only and Channel 2 program 1 is not configured. ***Switch 16 must be closed.*** If not the RUN light will not light and the program cannot be placed into the RUN mode using the digital input.

Channel #	Run DI	Switch 15	Switch 16	Note
Run CH1 Program 1	Close	Open	Closed	2
Run CH2 Program 1	Close	Closed	Open	
Run Ch1 and Ch2 Program 1	Close	Open	Open	1

DCP552 TECHNICAL TIP

RUN DIGITAL INPUT DOESN'T OPERATE

- **DUAL CHANNEL DCP552 RUN KEYBOARD OPERATION**
 - Synchronous operation "SYN" lit (P04 = 1)
 - Note 1: In order to run a program *both Channel 1 and Channel 2 must have that program number configured.*

Example: If trying to run Channel 1 program 1, Channel 2 program 1 must also have a program configured.
If not, then the RUN light will not light and the program cannot be placed into the RUN mode using the keyboard.

Channel #	Run Key	Switch 15	Switch 16	Note
Run Ch1 and Ch2 Program 1	Press	NA	NA	1