


External Wiring (continued)

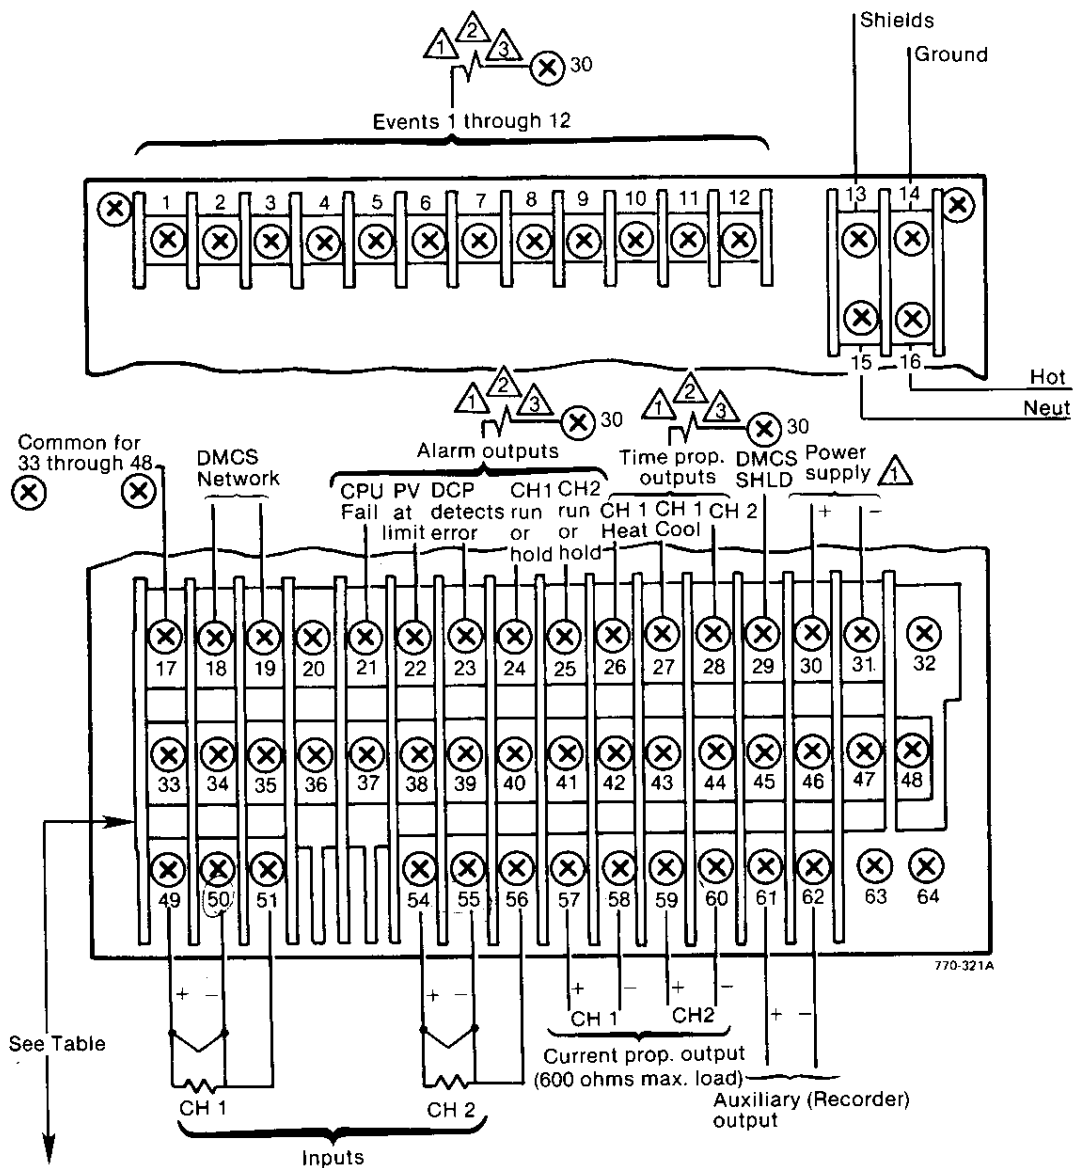

Operation	Terminals
RUN	33-17
HOLD	34-17
RESET	35-17
PV START and SEGMENT ADVANCE	36-17
SYNC	37-17
CH. SELECT	38-17
CH 1	39-17
CH 2	40-17
EXTERNAL 1	41-17
EXTERNAL 2	42-17

Program Select	Value
(Close the minimum number of contacts whose total value equals the program number—See Figure 2-14)	1 ... 43-17
	2 ... 44-17
	4 ... 45-17
	8 ... 46-17
	10 ... 47-17
	11 ... 48-17

⚠ User-supplied relay power supply required for events, alarms, and time proportional controller. Rating 24Vdc + 10. - 5% (includes ripple) 1A. Honeywell 30683383-001 can be ordered separately to meet the requirements.

⚠ User-supplied relay required for each event, alarm, and time proportional controller output. Sum of relays must not exceed 15. Rating 24 Vdc, 75 mA. Order separately Honeywell 30731674-001 relay and 30731675-001 socket for plug-in or 30736332-001 for solder-in.

⚠ Typical output circuit.

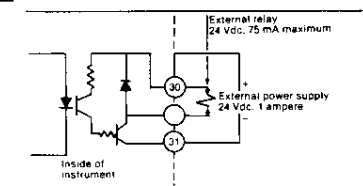


Figure 2-17—Composite external wiring diagram