

8. Error Messages;

If any unallowable operation is performed, the alphanumeric display shows error messages as follows:

Table 8.1

	Message	Meaning
1	ERROR 1	Tried to program in already entered number Tried to copy to already entered number
2	ERROR 2	Tried to verify unentered program Tried to copy unentered program
3	ERROR 3	Tried to run unentered program
4	ERROR 4	In IF EXT/ON EXT, program to jump has not been entered.
5	ERROR 6	In executing RAMPE, signal is not detected. (CH1)
6	ERROR 7	In executing RAMPE, signal is not detected. (CH2)
7	ERROR 8	Shortage of timer block of time event
8	ERROR 10	Tried to input a value of low limit > high limit
9	ERROR 11	Tried to finish program at RAMPT or RAMP
10	ERROR 14	EVENT differs from designation by parameter Input value of EVENT CONF is incorrect.
11	ERROR 15	Shortage of remaining program area
12	ERROR 16	Programming segment number exceeds
13	ERROR 17	Memory protect error
14	ERROR 18	SP is over high limit of range.
15	ERROR 19	SP is below low limit of range.
16	ERROR 20	No PV start point
17	ERROR 21	Incorrect remote program number
18	ERROR 22	Incorrect remote channel number

	Message	Meaning
19	ERROR 24	Loader dump error
20	ERROR 25	No designated program in loader
21	ERROR 26	No. to load has been already entered or no enough empty area
22	ERROR 27	Load error
23	ERROR 30	EEPROM write error