

## REQUIRED DECIMAL POINT LOCATION CANNOT BE SELECTED

Go to the Configuration mode and enter the READ/WRITE ANALOG INPUT matrix. In the ANALOG INPUT matrix, set both HIGH VALUE and LOW VALUE to **0000.0**. Then, change the DEC PNT selection from **000.0** to **0000**. Go to LOW VALUE and select **-00328** and **01598** at HIGH VALUE.

Specifically, use the +/- CONF key and then the ENTER key.

Use the ^ (**up arrow**) to the appropriate input.

Use the > (**right arrow**) 5 times to LOW VALUE and the ENTER key.

Enter **1** at GO TO CONF MODE , use the **0** key 5 times and the ENTER key.

Use the > (**right arrow**) to HIGH VALUE and the ENTER key.

Use the **0** key **5** times and the ENTER key.

Use the < (**left arrow**) 2 times back to DEC PNT and the ENTER key.

Use the > (**right arrow**) to select **0000** and the ENTER key.

Use the > (**right arrow**) to LOW VALUE and the ENTER key.

Select **-00328** and the ENTER key.

Use the > (**right arrow**) to HIGH VALUE and the ENTER key.

Select **01598** and the ENTER key.

Some possible choices of decimal point location are not available because the present HIGH VALUE or LOW VALUE would exceed +/- 3275.0, 327.50, or 32.750 after the decimal point location is moved to the right.