


DCP 100 ALARMS

ALARM 1 - CONTACT OPEN WHEN THE PV EXCEEDS 2100 DEGREES
(USE TERMINALS 16 & 17; N.C. POSITION)

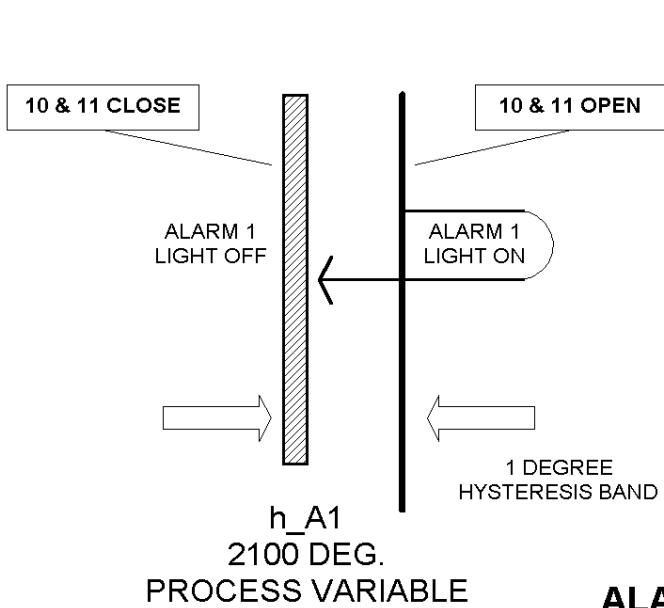


CONFIGURATION → **P_H1
ALA1**
**A1_d
USE3**

ALARM 1 BECOMES
ENERGIZED AND THE RELAY
GOES TO THE **OPEN**
POSITION.

ALARM RELAY 1

ALARM 2 - CONTACT CLOSURE WHEN THE PV GOES 10 DEGREES ABOVE OR BELOW THE
SETPOINT. (USE TERMINALS 23 & 24, N.O. POSITION)

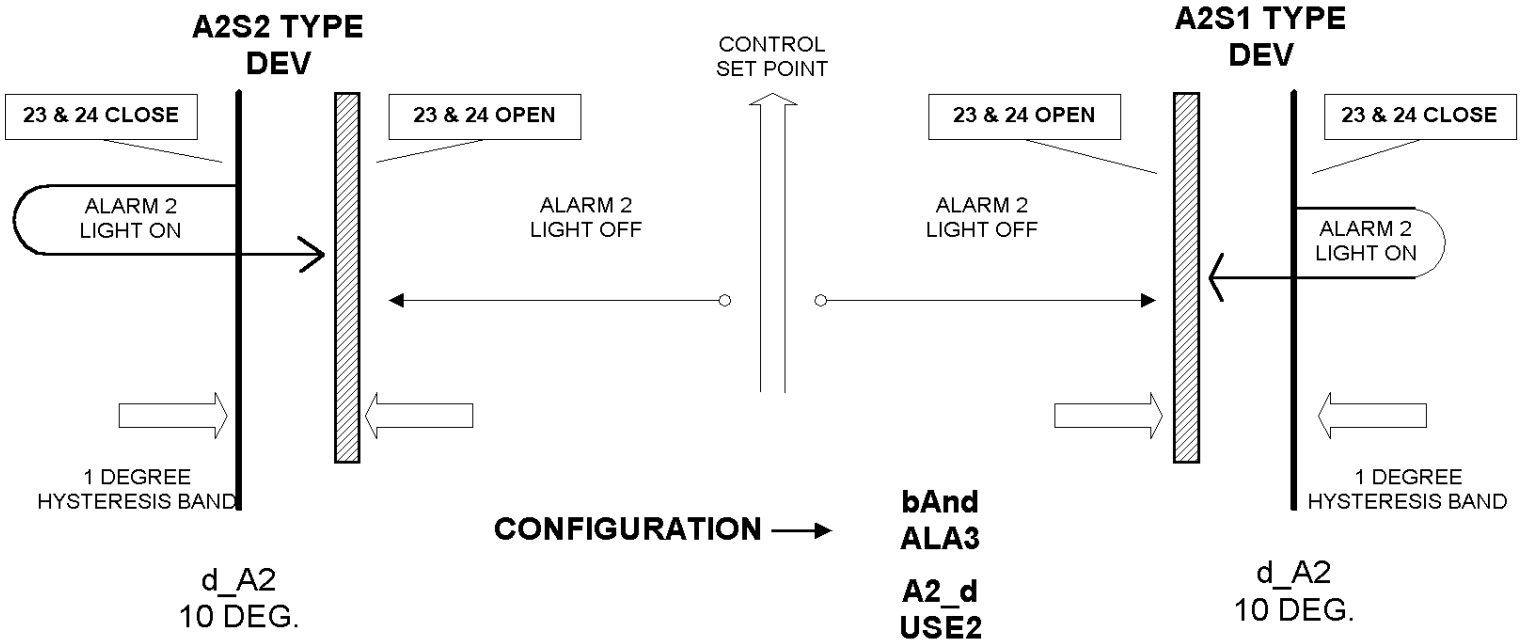

ALARM RELAY 2