

Running a Set Point Ramp

Step	Procedure
1.	Place the controller in the Automatic mode
2.	Press the Lower Display key until SP shows in the lower display. Set the Sp to the <u>desired starting Setpoint</u> of the Ramp.
3.	Start the Ramp by pressing the Run/Hold key.

Operation:

When the Run/Hold key is pressed, the Set Point ramp function starts. It ramps the Local setpoint at a calculated rate. At the **end** of the Set point ramp, it stores the **Final SP as the Local setpoint**. You now are controlling at that **Final Set point**.

If you should wish to *re-run* this program, then you must go back and do **steps 1 - 3**. Don't forget to set the Setpoint to the desired starting point of the Ramp.