



# UDC 3200 Application Note

## RESTORING FACTORY CALIBRATION TO INPUT 1

*Note: Same procedure works for Input 2*

### Step

### Procedure

1. Disconnect wiring from terminals 26 & 27.
2. Place a jumper wire across terminals 26 & 27.
3. Unit should read room temperature, if it is configured for a thermocouple.  
*If the unit does read the correct room temperature, then the thermocouple is open and needs to be replaced.*
4. If the unit does not read the correct room temperature, then change the **IN1 TYPE** prompt in the **INPUT 1** group to another type of thermocouple.  
Example : if set to **J T C H**  
set to **K T C H**
5. After change, press the **Function** key then the **Lower Display** key.
6. Unit should read the correct room temperature.  
If the unit does not read the correct room temperature, then the unit does have an input problem.